

United Guard™

SAFEGUARD YOUR USED EQUIPMENT WITH PROTECTION YOU CAN TRUST

With United Guard, you'll benefit from reduced downtime, higher resale value, and fewer service interruptions.

With United Guard You'll Receive:

- Free equipment inspections
- Warranted repairs on listed components
- No co-pays on any covered repairs
- Service at any of our more than 880 locations in North America

For program details contact your local branch or call 800.UR.RENTS.

UNITED GUARD ELIGIBILITY REQUIREMENTS

- Equipment must have a sale price of at least \$2,500 and must be less than 9 years old at the time of sale
- Equipment must be geographically located within the United Rentals range of service
- United Guard is only for the benefit of the original purchaser and is not transferable
- Entities that intend to sell or rent the equipment purchased are not eligible for United Guard
- United Guard must be purchased within 72 hours of equipment purchase
- United Rentals, Inc. (and its subsidiaries) makes no warranties to those defined as consumers in the Magnuson-Moss Warranty-Federal Trade Commission Improvement Act
- Powered licensed vehicles and trailers are not eligible

UNITED GUARD RATE PLAN

TERM	0 – 4 years old	5 – 8 years old	9 years old
3 Months / 400 Hours	2%	3%	5%
6 Months / 800 Hours	5%	7%	9%
12 Months / 1600 Hours	9%	11%	13%
24 Months / 3200 Hours	15%	17%	N/A
36 Months / 4800 Hours	23%	25%	N/A

Note: United Guard full coverage offered for new and used equipment. Sale of warranty is prohibited with equipment over 9 years old and/or under \$2,500 in value. Licensed vehicles are not eligible for United Guard. Used equipment must be in rental ready condition at time of sale. United Guard is available within 72 hours of equipment purchase and cannot be renewed once the term expires.



UnitedRentals.com
800.UR.RENTS

Parts Table

Not every component is covered by this agreement. Coverage and exclusions are detailed below.

UNITED GUARD COVERAGE INCLUDES

ENGINE:

Engine Block
Cylinder Liners
Piston
Piston Rings
Piston Pins
Cylinder Heads
Head Gasket
Crankshaft
Main Bearings
Con Rods
Con Rod Bearings
Balance Assemblies
Camshaft
Push Rods
Tappets
Valves
Springs
Guides
Timing Gears
Lubrication Pump
Drive Components
Casting Assembly
Thrust Bearings
Internal Oil Seals
External Oil Seals (internal failure)
Bushes
External Pump Drive Gear

TRANSMISSION/TRANSAXLE:

Charging Pumps
Gear Train
Shafts
Thrust Washers
Bushes
Needle Roller Bearings
Bearings
Gears
Internal Seals
Input and Output Seals (internal failure)
Clutch Packs
Couplings
Oil Lubrication Pumps
Main Control Valves
Relief Valves
Torque Converter
Gearshift Controller
Electronic Control (black-box)
Transmission Casing
PTO Drives

DRIVE LINES:

Main Shafts
Sliding Points
Flange/Yoke end of Drive Lines
Pivot Shaft
Pivot Shaft Support Bearings

DRIVE AXLES/FINAL DRIVES:

Bearings
Shafts
Thrust Washers
Seals
Input Seals (internal failure)
Tension Springs
Bull Gears
Pinions

Ring Gears
Crown Wheels
Internal Differential Gears and Locks
Axle Case
Differential Case
Yokes
Wheel Hubs

ELECTRICAL:

Batteries
Wiring
Motors
Solenoids
Solenoid Valves
Electric Instrument Panel
Switches
Relays
Sender Units
Hour Meters
Gauges
Sensors
Black-box
Microprocessor/ECU/ECM
Starter Motor
Alternator
Regulators
Controllers
Generators
Coils

COOLING SYSTEM:

Hoses
Fan Belts
Blowers
Fans
Fan Belt Tensioners
Water Pump
Internal Bearings and Seals
Fan Thermostat
Thermostat
Oil Coolers
Radiators
Cab Heating Assembly
Intercoolers
Aftercoolers
Heat Exchangers
Air Conditioners

FUEL SYSTEMS:

Injectors
Fuel Injection Pump
Fuel Lift Pump
Engine Priming Pump
Fuel Tanks
Carburetors
Propane regulators
Hoses and Fittings

HYDRAULICS:

Hoses
"O"-rings
External Seals
Exposed Pipes
Rubber Mountings
Hydraulic Tank Breathers
Hydraulic/Hydrostatic Motors
Hydraulic/Hydrostatic Pumps

Hydraulic Control Valves
Relief Valves
Accumulators
Shuttle Valve
Hydraulic Tank and Mounting
Hydraulic Cylinders (rams)
Electro/Hydraulic Valves
Check Valves

MAIN FRAME/CHASSIS:

Chassis
Mainframe
Track Frames
Equalizer Bars/Pivot
Cylinder Mountings
Pins
Bearings
Bushes
Seals
Trunion, Trunion Housing and Trunion Brackets
Axle Mountings
Steering Cylinder Mountings
Axle Trunion
Mast
Mast Rollers
Carriage
Carriage Rollers
Boom
Tele-boom
Boom Mountings
Boom Cylinder Mountings
Stabilizer

CASTINGS AND CASINGS, UNDERCARRIAGE, IDLERS, TRACK ADJUSTERS, RUNNING GEAR:

Bearings
Shaft
Thrust Washers
Seals
Input Seals (internal failure)
Front Idlers
Idler Shafts
Track Adjuster Assembly
Tension Springs
Bull Gears
Pinions
Crown Wheels
Yokes
Steering and Brake Controls
Final Drive Shaft
Sprockets/Segments (for breakage where applicable)

OTHER COMPONENTS:

Compressor Air End Components
Generator/Welder Electrical End Components
Water Pump – Pump End Components
ROPS & FOPS Structures

EXCLUSIONS:

The following wear items/parts are excluded:
Air Filter
Oil Filter
Fuses
Tires and Tubes
Cosmetic Items
Non-functional Parts